 
 


## Pack components

Emergency Breathing Support System (EBSS)

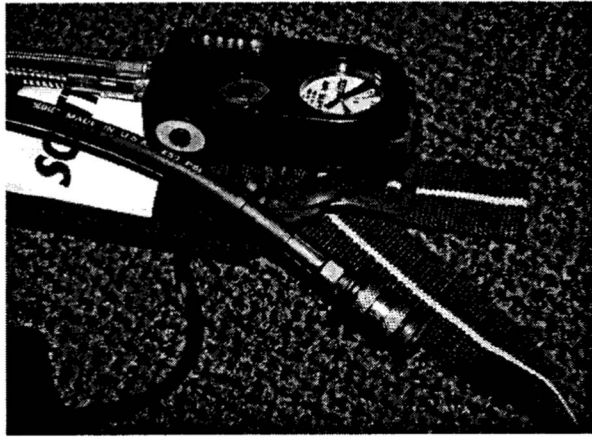 


EBSS with dust cap and hold down strap

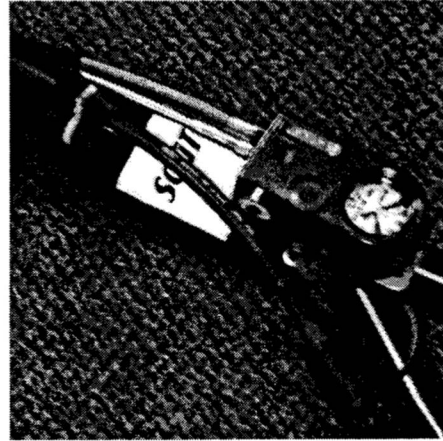

The EBSS can be used to supply a firefighter with air from another pack. Uncouple the quick disconnect from the fire fighter with low air and connect into the donor pack. Remember there will be no heads up display to the firefighter who is borrowing air. Be sure the dust cap is in place at all times to prevent contaminants entering the EBSS.

RIC Universal Air Connection (UAC)

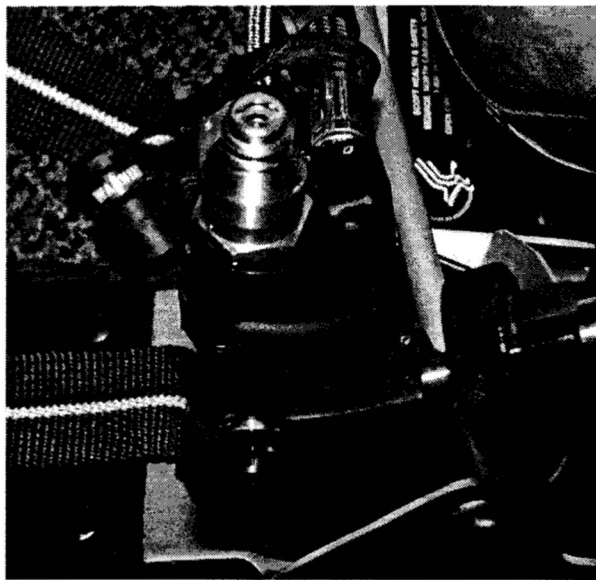

The UAC can receive air from any RIT pack. The UAC is common to all manufacturers. Be sure the dust cap to the UAC is always in place to prevent debris from entering the air fitting.